
INSTRUCTION PAPER



OUTDOOR FURNITURE

SELECTA | Dining table 313x90

Start by unpacking everything carefully. Make sure to cover the floor to prevent any damage or scratching (you can use the cardboard box for this).

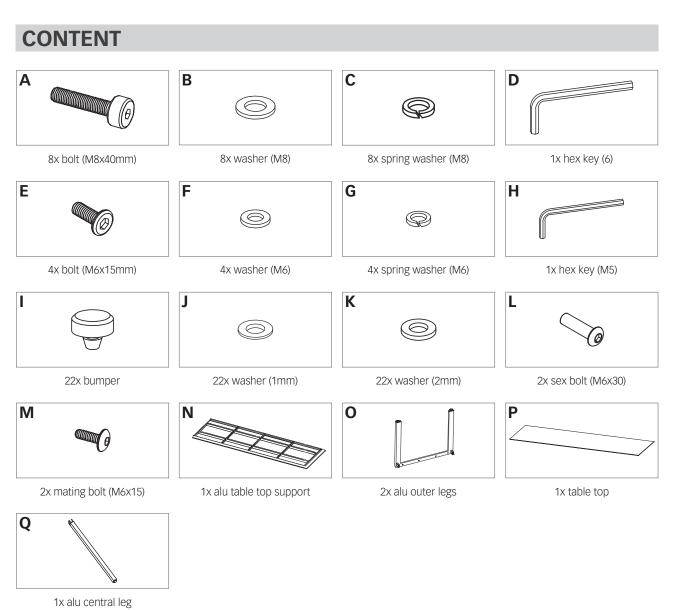


STEP 1: ASSEMBLE LEGS

B C A D H E G F M H

Slide the outer legs (O) equally onto the table top (N). Use the hexkeys (D,H) to fixate the outer legs as shown in the picture. Make sure you follow the correct order as indicated by the letters in the picture. Finalize with the central leg.

STEP 2: TURN TABLE

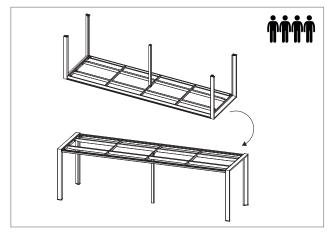

Turn the table carefully to its normal position with at least 4 persons.


INSTRUCTION PAPER

SELECTA | Dining table 313x90




OUTDOOR FURN**i**ture

STEP 3: PLACE BUMPERS

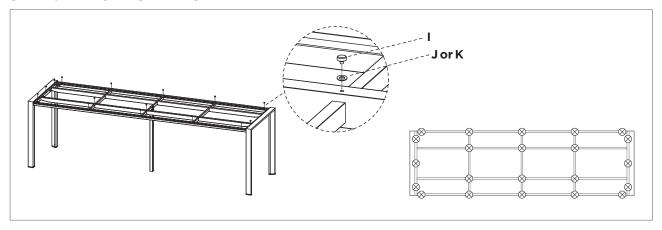


Place the bumpers (I) with the washers (J,K) on the correct positions as shown on the topview on the right. Check during setup which washer is necessary for adjusting the glass top on the frame, the 1mm or the 2mm.

STEP 4: PLACE TABLE TOP

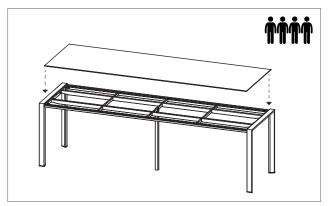

Carefully place the table top (P) in the lower part of the support with at least 4 persons.

STEP 5: ADJUST FEET

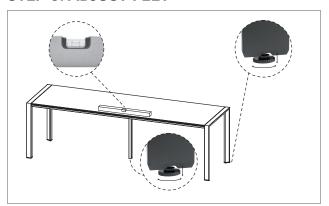

Check with a spirit level if the table is placed level. If not, (un)screw the adjustable feet till your table is completely level.

